


A 3PE seamlessly integrated to the user experience!

Teach Pendant with 3-Position Enabling Device

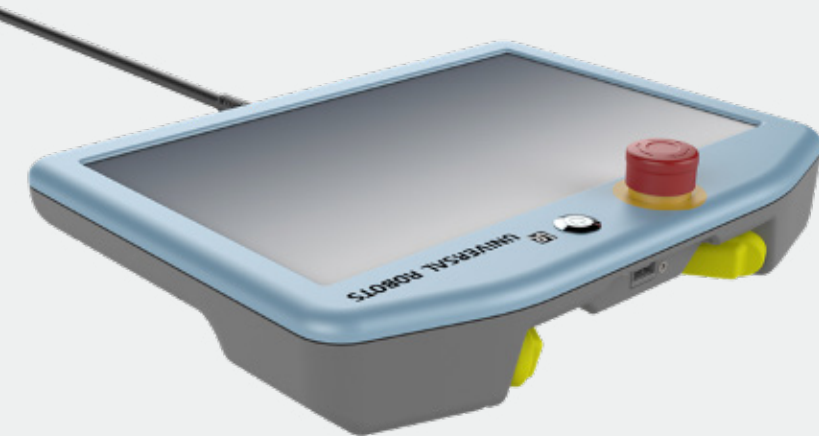


A 3-position enabling teach pendant is now available as a variant for all payloads of UR robots, and as a UR+ component. The 3PE device is mechanically and functionally integrated with the Teach Pendant – just plug-and-play with any control box. Additionally, it is fully integrated into the Polyscope user interface to enable all robot motion, including Freedrive, in manual mode.

At a glance

- Full mechanical 3PE device integration
- Full software integration, providing a seamless user experience as the 3PE Teach Pendant is natively supported in Polyscope.
- Not only does it connect to the Control Box with the same connector as the standard Teach Pendant, but because the mounting points are identical, it can be mounted to any existing teach pendant brackets.
- Includes two 3PE devices, allowing comfortable use with left or right hand
- Compatible with all existing UR robots
- IP54 rated: dust and water resistant
- Evaluated by TUV NORD, included in certifications to ISO 10218-1:2011 and ISO 13849-1:2015

3PE all UR robots

You can easily update your current UR robot by ordering the new 3PE Teach pendant.

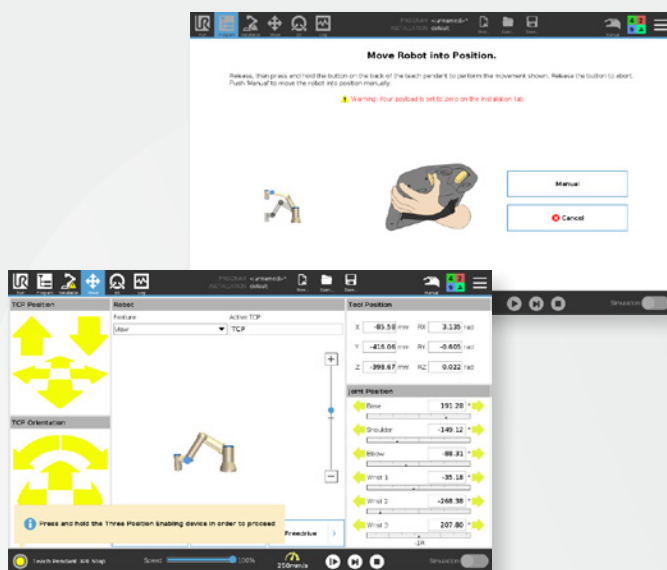

In detail

Width	300 mm	11.81 in
Height	231 mm	9.09 in
Thickness	50 mm	1.97 in
Weight, including 1 meter of cable	1.8 kg	3.961 lbs

Universal Robots A/S
 Energivej 25
 DK-5260 Odense S
 Denmark
 +45 89 93 89 89

www.universal-robots.com
sales@universal-robots.com